


MOMENTS™

MOOD™

Pleasure Toy

✦ Product Description

- ✦ All made of liquid silicone, soft, safe, and reliable.
- ✦ Wireless Remote control also uses plastic coating technology. It is IPX7 waterproof, suitable for bathroom, bathtub and other watery private environments.
- ✦ The tail is ultra-thin, suitable for wearing anytime, anywhere.
- ✦ 10 modes of vibration.
- ✦ Charging time is 70 mins, using time is 45 mins.
- ✦ Remote Control distance is 10 meters.
- ✦ Size of product is 88 x 56 x 27 mm.

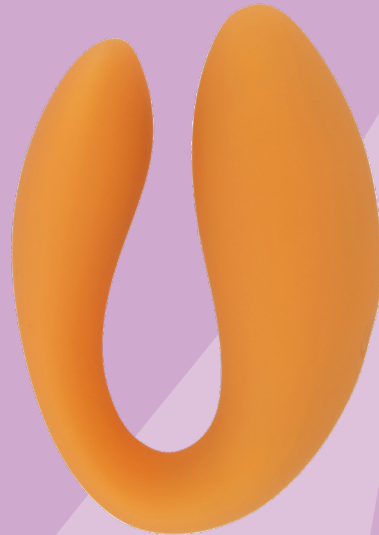

✦ Safety


1. Don't share it with others for your health.
2. Stop using it if you feel uncomfortable.
3. Avoid serious injury when it is used to stimulate the penis, use it with sex lubricant that is recommended.
4. Stop using it if you find the head of the product is not smooth enough or broken.
5. Keep it from children's reach.


✦ Attention

1. Please charge it before using.
2. Please use good quality personal lubricant. Something (massage oil, hand cream or cleaning solution etc.) containing hazardous substances cannot be used as lubricant.


✦ Operation


Without Remote Control

Long press  1 for three seconds to turn on or off, and it will be in standby mode.


When powered on short press  1 to change the frequency. The lights will change with 10-mode frequencies.

With Remote Control

When the main body is on, short press  2 to change the frequencies. The lights will change with 10-mode frequencies.

Long press  2 for three seconds to enter standby mode.

NOTE: The white light will blink on and off during charging, and then will light up continuously when it is fully charged.

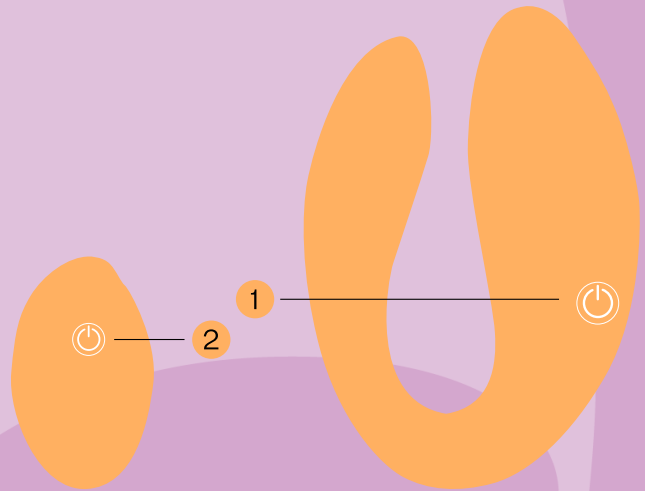

✦ How to Charge the Battery

1. Before charging, make sure the outlet is free from water or lubricant residue.
2. Insert the DC charging plug provided to charge the device.
3. Unplug the device before use.

Charging time is 70 minutes, full charge lasts up to 45 minutes.

✦ Cleaning, Maintenance and Storage

- ✦ Using and maintaining the Moments Mood Pleasure Toy correctly will prolong the lifespan of the device.
- ✦ Clean thoroughly before first use and after each subsequent use. Warm water and medicinal alcohol can be used to clean this product, but warm water is highly recommended.
- ✦ Please naturally air dry and avoid direct sunlight.
- ✦ Please store it in a dust-free place.

✦ Disposal Instructions

Dispose of this device according to your local regulations. For more information, please contact your municipal waste disposal office.